


HOW TO MEASURE FOR RECESS SIZE

This is the measurement that you need to take if the blind is to fit inside the window recess. Measure the full width and height of the recess and we will make appropriate deductions to ensure a perfect fit. Measure in 3 places for both width and drop, and use the smallest measurement.

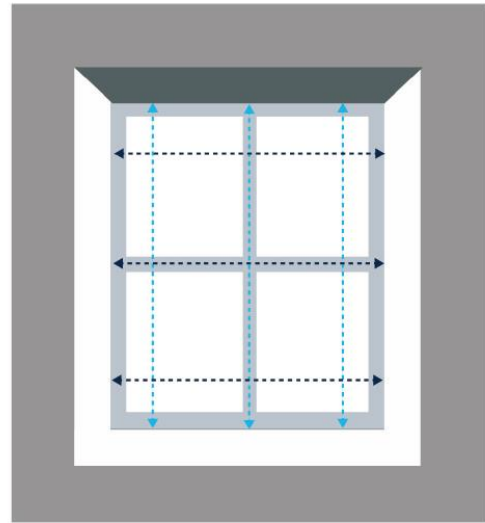

HOW TO MEASURE FOR EXACT FITTING

If the blind is to be fitted outside the window, measure the area you want the blind to cover. We will make the blind to this specified size with no deductions. We recommend that the blind extends 5cm either side of the window, and at least 7cm at the top. The overlap at the bottom is personal preference but take into account any obstacles, such as radiators.

